

## AWEKAS Direct Link with Eusotec WLAN Mini Web Server


With the small size of only 9.5 x 7.2 x 13.97 cm Eusotec Servers have a power consumption of only 2 watt. For operation no further PC is required.

Besides the built in web server with data logger and email/SMS alarming system the Eusotec server also provides interfaces like XML, FTP and Direct Link (firmware V2.2 or higher).


For AWEKAS the Direct Link interface is used.

The connection is easy:

Call the “**Change userdata**” screen of [www.awekas.at](http://www.awekas.at) and select “**Eusotec**” for the “**Report mode**”.

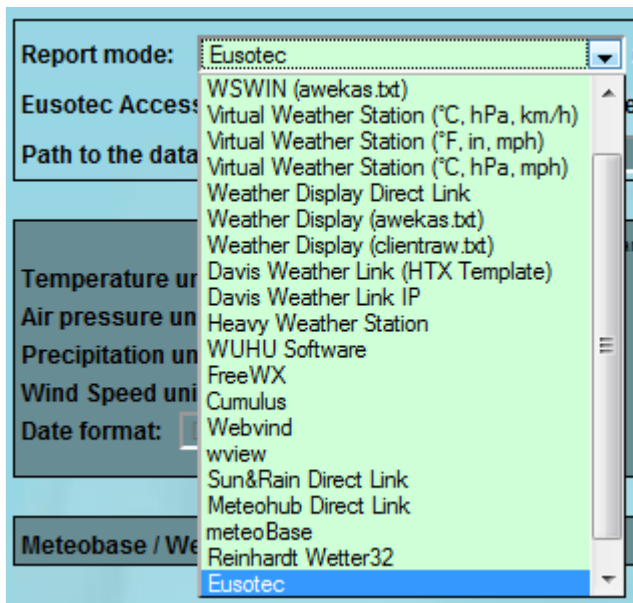

After saving and calling again the “Change userdata” screen, the “**Eusotec Accesscode**” is displayed.

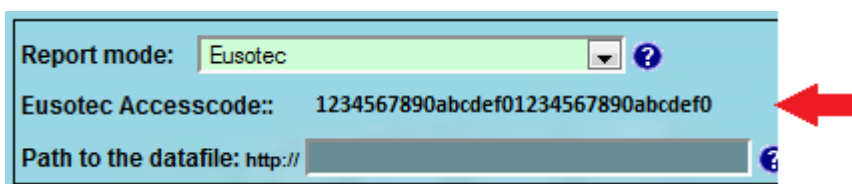

Copy the line starting with **http://www.awekas.at** of file **/secure/datalink.txt1** to a new file called **/secure/datalink.txt**.

Now please replace the `user_name` and the `access_code` with the data you got above:

```
http://www.awekas.at/eusotec_aw_input_values.php?val=TestUser;1234567890abcdef01234567890abcdef0;.....
```

The following parameters like `%087;%088;%004`;etc. of this line will be replaced during runtime. Please keep care for the correct spelling and take care that you are using no carriage return or line feed in this line.

After transferring the new file with the web pages (see manual) the Eusotec Server will start sending every 5 minutes the replaced variables to AWEKAS.

Don't forget to set a telnet password (menu 1 of Eusotec Server) to provide security to your access data.